

EVOLVE0

StrongPhone F5

EN



www.evolveo.com

INTRODUCTION

Thank you very much for choosing our products.

In order to use your mobile phone better, we recommend that you read this manual carefully, in order to use the various functions described in this manual fully.

Some features may not be allowed to use for different mobile phone network configuration and different services provided by the operators, please contact the seller or network operators for confirmation.



KEYBOARD

1.LEFT SOFT KEY, RIGHT SOFT KEY

Perform function showed at the left/ right bottom of LCD.

LEFT to main menu, RIGHT to contact list under standby interface.

2.DIAL/ PICK KEY

SIM 1/SIM 2 dials or picks a call from SIM 1/SIM 2.

Press this key to check the recent call records under stand interface.

3.END/ POWER KEY

End a call.

Long press to power on and off.

Return to stand interface.

4.OK KEY

Confirm.

5.NAVI-KEY

Left/Right: Move cursor left and right when edit.

Up/ Down: Scroll and scan the contact list/ number/ messages and all sub menus. Move cursor up and down when edit.

6.NUMBER/ LETTER KEY

Dial and input.

7.*

Different functions under different menus.

Continuous press * input“+ under dial input interface.

8.#

Different functions under different menus.

Switch input method under text edit interface.

Long press change user profiles under standby interface.

Notice:

- 1).Short press means press and release at once; Long press means keep pressing for over 3 seconds.
- 2).All function menus are for keyboard operating. Please follow the guidance on the LCD for touch operating.

PREPARION**INSTALL SIM CARD**

Any scratch and bend may easily damage the SIM card. Please be careful when insert, take out and preserve the SIM card.

Please make sure the phone is power off and battery is free before SIM is taken out.

Take the back cover off and find the SIM card slot. Put SIM card in the slot right. Please make the metal part of the SIM card down and the edge angle match the slot shape.

INSTALL SD CARD

SD card is supported. Please make sure the SD card is installed properly.

Take out the battery and find the SD card slot. Release the slot cover and make the metal part of the SD card down. Pay attention to the edge angle. Close the slot cover after SD card is totally plugged in the slot properly.

INSTALL BATTERY

Open the back cover.

Insert the battery into the battery slot.

Close the phone cover.

REMOVE BATTERY

Power off the phone first and push down the back cover.

Remove the battery from the battery slot.

CHARGE BATTERY

Insert the charger plug in the charging interface, and then connect the other side to the power socket. If the phone is power on and the stripes at the top right of the screen keep rolling, the phone is charging. When the stripe is full of the whole icon and stop scrolling, battery charging is completed; The charging scroll icon will still be rolling when the phone is charging after power off.

Pull out the plug after charging is completed.

·When battery is low, the phone will warn you. While capacity is too low, the phone will automatically power off. Please do not make battery under low power for a long time because it will damage the quality and longevity.

·It is normal that when battery voltage is too low, there will be a pre-charging process without any charging signs.

SECURITY PASSWORD

Mobile Phone Password

Password prevents your phone from being used without permission. (Original password is 1234). Please change your password for safety.

COMMON FUNCTIONS

POWER ON

Long press End/ Power key to power on your phone. Background light turns on and boot animation flashes.

This phone is dual sim and dual standby with GSM network.

MAKE A CALL

When network provider logo appears on the screen, you can dial or answer the phone. The network signal strength is displayed on the top left corner of the screen. Call quality is affected strongly by obstacles.

Input numbers to make a call under standby interface.

MAKE A CALL WITH CONTACTS

You can call anyone in your contacts directly.

Enter the main menu and choose [Contacts] and enter the list. Find out the contact you want and press [Dial] / [Answer].

Please follow the introduction in [Contacts].

MAKE A CALL WITH CALL RECORDS

All dialed/ received/ missed calls are all saved by type under records menus. Old records will be deleted automatically when records capacity is full. Press [Dial]/ [Answer] key can check recent call. You can dial anyone you want in the list directly.

ANSWER A CALL

There'll be signs (vibration or ringtone) when you have a call. You can pick up the call in these ways:

1. [Call Center→Call Settings→Advanced Settings→Answer Mode] choose [Cover answer].

2. [Call Center→Call Settings→Advanced Settings→Answer Mode] choose [Any Key].

3. [Call Center→Call Settings→Advanced Settings→Answer Mode] choose [Automatic Answer Under Headset]

REFUSE A CALL

Press [End]/ [Power] key or [Right Function Key] to refuse a call.

END A CALL

Press [End]/ [Power] key to end a call and cancel a dialing call.

VOLUME CONTROL

Use the navigation keys to control the volume during a call.

INCALL OPTIONS

Press Right Function Key can enable the hand-free function during a call. Press again can shut down the hand-free function.

Press [LEFT] key can enter call settings menu during a call. The menu depends on the call situation and can only be seen during a call. Call forwarding, call waiting, conference call should be supported by network operator. Please check with your operator for details.

•**Keep/resume phone call:** keep the current call in status, or resume a phone call

•**End phone call:** End the current call.

•**New call:** Enter call dialing interface.

•**Contacts:** Enter contact list

•**Records:** Enter call records

•**Message:** Enter message sending

•**Voice Record:** Enter record interface and record the call

- Silent:** Turn on or off the local voice.
- DTMF:** Dual tone multiple frequency

POWER OFF

Press [End]/ [Power] key can power off your phone under standby interface.

MENU FUNCTION

CALL HISTORY

1.Call history

Missed Calls / Dialed Calls/ Received Calls/ Delete call logs, You can view a list of the above.

2.Call settings

SIM Call settings

Call waiting/ Call divert/ Call barring/Line switching. You can browse a list of above.

— **Call waiting:** Set the status to be activated, deactivated, query status. Note: This function depends on the network operator. Please ask the local network operator for more detail.

— **Call divert:** The options are “Divert all voice calls”, “Divert if unreachable”, “Divert if no answer”, “Divert if busy”, “Divert all data calls”, “Cancel all divers”. Note: This function depends on the network operator. Please ask the local network operator for more detail.

— **Call barring:** The options are “All voice calls”, “International voice calls”, “International voice calls except to home”, “All voice calls”,

“Voice calls when roaming”, “Cancel all”, “Change barring password”.

Note: This function depends on the network operator. Please ask the local network operator for more detail.

— **Line switching:** Able to switch line 1 or line 2.

Advanced settings

Through this function, you can set Auto redial, Call time display , Call time reminder, Reject by SMS, and Answer mode, etc.

— **Auto redial:** Able to open or close the function of auto radial.

When it’s on, the phone shall redial automatically after you failed dialing.

— **Call time reminder:** You will be reminded when the call time reaches the time set before if it’s on.

— **Reject by SMS:** After it’s on, you may choose to reject by SMS when being called.

— **Connect notice:** After it’s on, reminding sound will be heard when making a call.

— **Answer mode:** Able to set answer the call by pressing any key, cover answer or auto answer when headset mode.

GAMES

The mobile phone provides the F1 Race game and games settings.

USER PROFILES

The mobile phone provides multiple user profiles General, Silent, Meeting and Outdoor.

You can customize settings on profile and then activate corresponding profiles.

There is no option for activating the Headset mode on the screen.

When you insert an earpiece to the mobile phone, the mobile phone

automatically enters the Headset mode. For details on operation, refer to General. If you set Call settings > Common call settings > Answer mode to Any key, incoming calls will be automatically answered.

Alert type: Able to set the alert type(alert way: ring, vibrate, silent, vibrate then ring)

Ring type: Able to set ring type(alert way: repeat, ascending, beep once).

SIM 1 Ringtone: Able to set ringtone of SIM 1 incoming call.

SIM 2 Ringtone: Able to set ringtone of SIM 2 incoming call.

Ringtone volume: Able to adjust the ringtone volume by pressing the left and right navigation buttons or side key.

SIM 1 message: Able to set ringtone of SIM 1 message.

SIM 2 message: Able to set ringtone of SIM 2 message.

Message volume: Able to adjust the message volume by pressing the left and right navigative buttons or side key.

Keypad: Able to set the sound of keypad to be "silent", "click", "tone".

Keypad volume: Able to adjust the keypad is being powered on.

System alert: Set the system alert on or off.

MESSAGES

Short message service is a network needed function. You can send/ receive/ edit a short message. Please check with your operator for details.

WRITE MESSAGES

Enter the interface of the message editing,input the message content, and press the left function key to access the options menu.

Select "Options" to enter the menu where you can select "Send,

insert commonly used statement, insert contact information, insert emoticons, save messages" and other options.

Select "Send" or press the OK key to enter the number inputting interface:

— **Input number:** input the recipient number directly;

— **Add from Phonebook:** enter the phonebook to select recipients.

Enter the recipient number and then press the OK button to send text messages.

INBOX

Inbox storage and manage the received messages.

Enter the selected Inbox, press the navigation key to select text, and press the OK key to read its contents.

Press the left function key to access the Options menu, you can restore, delete, forward, call, lock, mark, sort and so on.

DRAFT

When edit a sms which saved as a draft message can be for viewing and management, operation in this feature, please refer to the Inbox.

OUTBOX

Outbox storage and manage the messages being sent and failed being sent. Please refer to the Inbox.

SENT MESSAGES

Sent messages storage and manage the messages sent and stored. Please refer to the Inbox.

TEMPLATES

The phone presets numbers of the unit commonly used phrases, you can edit, remove, or take the phrase as the content of messages.

MESSAGES SETTINGS

SIM:

- **Profile settings:** setting the number of the SMS center
- **Validity period:** setting SMS validity period
- **Message type:** setting the type of SMS
- **Delivery report:** setting the switch of SMS report
- **Reply path:** setting the switch of reply path
- **Preferred connection:** setting a preferred connection of the SMS
- **Voice Mail server:** Each SIM card can be set two voice mail number in the settings, press the “1” key for a longtime to make available to listen to dial voice mail number voice messages. This function should be supported by the network operator.

Memory status: The memory status of SIM card and the phone are visible.

Save sent message: setting the switch of the storage of sent messages.

Preferred storage: setting the preferred position of the storage of SMS.

MULTIMEDIA

CAMERA

You can take pictures and save them in your phone.

You can set the camera when it's open:

Adjust the focus by NAVI [Up] and [Down] key.

Press [Option] key:

- **Video Recording:** Switch to video recording function
- **Photos:** You can check the photos in your SD card and choose it as a wall paper or rename them and delete them.

— Camera Settings:

Avoid Flashing: Can set “50Hz” or “60Hz” according to your need.

Delay Shooting: 5seconds/10/15 according to your need.

— Photo Settings:

Photo Size: 160*120、320*240、240*320

Photo Quality: Low/ middle/ high

— **White Balance:** Auto, Sunlight, Tungsten, Daylight, Cloudy, Glow.

— **Mode:** Auto/ Night shot

— **Storage:** Storage location can be phone and SD card.

— **Reset Default:** Reset all settings to default.

Press [OK] key to take a photo after settings.

PHOTOS

View the photos and press [left] key to choose:

— **View:** View the photos

— **Send:** Send photos through Bluetooth

— **Set:** Use it as wallpaper

— **Rename:** Reset its name

— **Delete:** Delete the photo

— **Information:** View the specification of this photo

VIDEO RECORDER

Press [Option] to get these functions:

— **Switch to Camera:** Switch to camera

— **Video Recorder Setting:** Avoid flashing

— **Video Setting:** set the quality of the video

VIDEO PLAYER

Display and play the videos in the list.

Choose a video and press left key to get these functions:

- **Play:** Play the video you choose
- **Send:** Send the video through Bluetooth
- **Rename:** Rename the video
- **Delete:** Delete the video

Press [OK] key can play and suspend the video playing. Long press Navi [Left] and [Right] can speed and backward the video playing. [Up] key switch full screen. [Down] key stop playing.

MUSIC PLAYER

Play the music files saved in corresponding directory. Press [OK] key to play/ suspend. Press [Left] and [Right] to get last and next song. Long press [Left] and [Right] to speed and backward.

Press* or # to control the volume

Press [Playlist] to enter play list. Choose a file and press [Option] can get these functions:

- **Play:** Play the song
- **Details:** View the details of the song
- **Update the playlist:** Update the playlist
- **Setting:** Set concerned parameter

VOICE RECORDING

Press [Left] key to get options for new record, record list and settings.

FM RADIO

FM Radio is enabled in this phone.

Enable FM and press Navi[Up]/[Down] key to get next/last channel.

Press Navi[Left] and [Right] to search automatically. Press [OK] to enable and disable FM radio. Press [Left] key for these options:

- **Channel List:** Edit channel name and frequency.
- **Manual Input:** Manual input frequency.
- **Auto Search:** Search channels automatically and save.
- **Setting:** Open or close the background play.

ALARM

Multiple alarms are enabled under power off or silent mode. Choose any alarm and press [Edit] can edit the parameter. Do not forget to press [Save] after you finish setting.

PHONEBOOK

This feature can view and manage the telephone number information in the machine and in the SIM card

1. Contacts List

Press the right function key in the standby screen to access Contacts. Contacts list is displayed by default for all phonebook records in mobile phone and SIM card., you can press "options" to enter the menu, then select "Contacts Settings -> preferred storage location" to re-set the display of the phone book.

In the list interface you can do the following:

- Select "Add new contact" you can add a SIM card or phone number;
- Press the navigation key to check the records;
- Press the number keys by the first letter to find telephone numbers;
- Press dial keys will call the current number ;
- Press the left function key to access the Options menu, and perform the corresponding function through the menu;

- Press the OK key to view the current record for more information.

2. Options menu

In the Contacts Options menu you can do the following:

- **View:** check the detail of the current contact number.
- **Sending text message:** Sending messages to the current number.
- **Call:** Dial the current number
- **Edit:** Edit the detail of the current number.
- **Delete:** delete the current number.
- **Copy:** Copy the current number.
- **Add to blacklist:** Add the current number to the blacklist.
- **Mark several:** select the current or multiple contacts.

3. Contacts settings: Able to take operations below:

- **Extra number:** Owner numbers, fixed dial, SOS numbers may be set
- **Memory status:** Memory status of SIM card and the phone can be checked.
- **Copy contacts:** The numbers can be copied to SIM card from the phone or to the phone from SIM card.
- **Move contacts:** The numbers can be moved to SIM card from the phone or to the phone from SIM card.
- **Delete all contacts:** All numbers in the phone or in SIM card can be deleted.

You can add a contact under this menu.

Input number and press [Left] key under standby interface to save the number to phone, SIM card contacts.

FILE MANAGER

The phone supports the Micro SD card. You can use the file manager

to conveniently manage various directories and files on Micro SD card.

Click "OK" key enters the selected folder;

Press left function key to enter options, you can perform the following operations:

- **Open:** open the current file.
- **Send:** send the selected file by Bluetooth or MMS.
- **New folder:** build a new folder in the current storage device.
- **Rename:** rename the current file.
- **Delete:** delete the selected folders, this function for system folders is unavailable.
- **Mark several:** mark for single or multiple folders.
- **Copy:** copy the file into a certain document.
- **Move:** move the file into a certain document.
- **Details:** check the related information of the folder.

SETTINGS

PHONE SETTINGS

— Time and Date

- **Local Setting:** Set the city you are in.
- **Time/ Date:** Set the time and date.
- **Format Settings:** Set the displayed format of the time and date.

— Language

You can choose whatever language the phone provided.

— Default Input Method

Set the default input method for editing.

— Standby Menu Display

You can choose the display of LCD under standby interface.

- Wall paper:** Choose your favorite wall paper.
- Power on Animation:** Choose animation displayed when power on.
- Power off Animation:** Choose animation displayed when power off.
- Display Time and Date:** Press [OK] key to enable and disable this function. When it's enabled, the time and date will be displayed on the screen.

— **Dedicated keys**

Set the Navi Key shortcuts.

— **Other Settings**

- LCD background light:** Set the brightness of the LCD background light and lasting time.

SECURITY

This function provides you with related settings about safety use.

— **SIM security**

- PIN lock:** The PIN (Personal identification number, 4 to 8 digits) code prevents your SIM card from being used by unauthorized people.
- Change PIN:** In general, the PIN is supplied with SIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input wrong PIN code for three times.

— **Phone security:**

You can power on or off the phone lock, the password is 1234 by

default. And change the password, you should firstly input initial password 1234, and input the desired new password.

NETWORK SETTINGS

You can search the network again. Select your favorite network and choose to register the network automatically or manually.

DUAL SIM SETTINGS

— Dual Sim (2SIM cards)

SIM1 and SIM 2 are enabled.

— Only SIM1

SIM 1 is enabled while SIM 2 is disabled.

— Only SIM2

SIM 2 is enabled while SIM1 is disabled.

RESTORE SETTINGS

Input phone password (1234) and confirm. The phone will power off and everything in the phone will be reset.

BLUETOOTH

-POWER: Choose if enable BT or not.

-VISIBILITY: Choose if share or hide the BT. Other devices can't find your BT if it's hide.

-My Device: Search BT devices around

-My name: Name showed to other devices when BT is enabled and can be found.

TORCH

Through the option to turn on or turn off or SOS the torch.

INPUT

Multiple input methods are offered. Press [#] key can circularly switch the input methods: ABC/abc/Abc/Numeric.

Do you still need an advice after reading this guide?

First read “Frequently Asked Questions” at www.evolveo.com or contact the **EVOLVEO** technical support.

The warranty does NOT apply to:

- Installing a different firmware than the one installed in the EVOLVEO phone as original from the factory.
- Electromechanical or mechanical damage to the phone caused by improper use (e.g. broken display, broken front or back cover of the phone, damaged microUSB connector, SIM card slot, microSDHC card slot, headphone jack, etc.).
- Damage to the speaker and headphones caused by metallic particles.
- Damage by natural causes like fire, water, static electricity, high temperatures.
- Defects caused by normal wear and tear.
- Damaged by unauthorized repairs
- Phone's firmware if it requires updating due to changes in mobile

network parameters.

- Mobile network malfunctions ☒ Battery if it does not retain its original capacity after 6 months and more (warranty for battery capacity is for 6 months).
- Intentional damage.

Warranty and post-warranty service

Repairs and servicing may only be carried out in an authorized service centres for EVOLVEO products (see www.evolveo.com), otherwise you may damage your mobile phone and lose the warranty.



Disposal: The symbol of crossed out container on the product, in the literature or on the wrapping means that in the European Union all the electric and electronic products, batteries and accumulators must be placed into the separate salvage after finishing their lifetime. Do not throw these products into the unsorted municipal waste

  **DECLARATION OF CONFORMITY**

Hereby, the company Abacus Electric, s.r.o. declares that the EVOLVEO StrongPhone F5 is in compliance with the requirements of the standards and regulations, relevant for the given type of device.

Find the complete text of Declaration of Conformity at
<ftp://ftp.evolveo.com/ce>

Manufacturer

Naxya Limited / No. 5, 17/F Bonham Trade Centre
50 Bonham Strand, Sheung Wan, Hong Kong

Importer

Abacus Electric, s.r.o.
Planá 2, 370 01, Czech Republic

Copyright © Abacus Electric, s.r.o.

www.evolveo.com

www.facebook.com/EvolveoCZ

All rights reserved.

Design and specification may be changed without prior notice.